



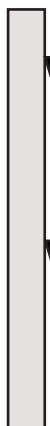

This cabinet package includes...

- A - (1) Backing panel
- B - (2) Side panels
- C - (1) Top panel
- D - (1) Front cross panel
- E - (1) Front cover panel
- F - (2) Manifold support bars
- G - (1) Lock/key assembly
- H - (4) Screws w/ wignuts
- I - (4) Support bar nut/bolt

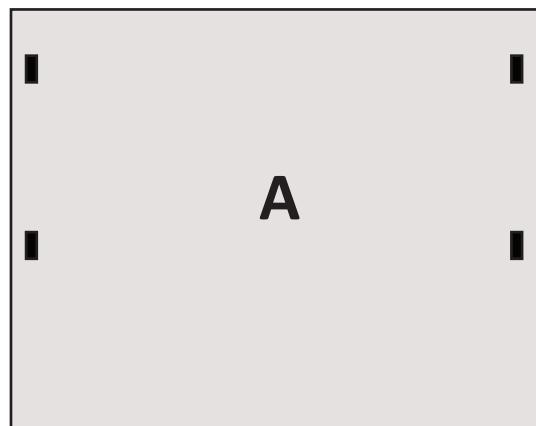


B



B



E

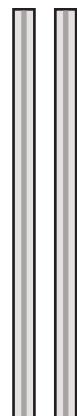

F



H




G



I


*Note - Applicable for Small,
Medium, and Large
cabinets.

1.

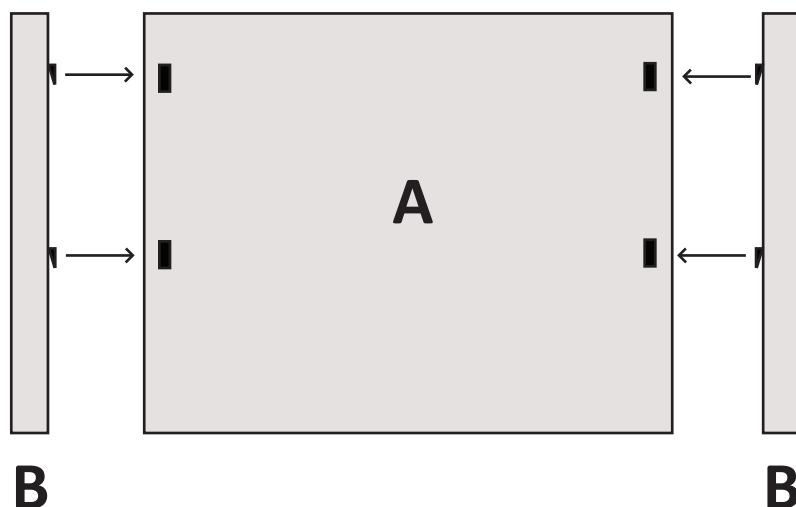


Slide the hooks from the side panels into the slots on the backing. Ensure the hooks slide into the panel in a downward direction, and secure the connection using a light mallet or hammer if necessary.

2.

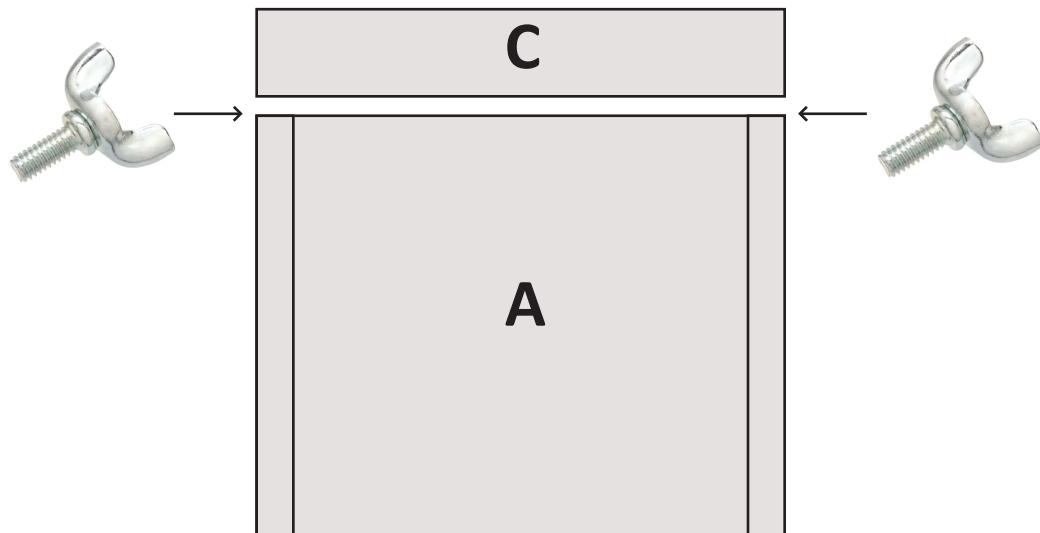


Attach the top panel to the cabinet via the four screws and wingnuts provided, with the lip facing the front of the assembly. It is recommended that the cabinet be mounted onto the wall after the top panel is secured.

3.

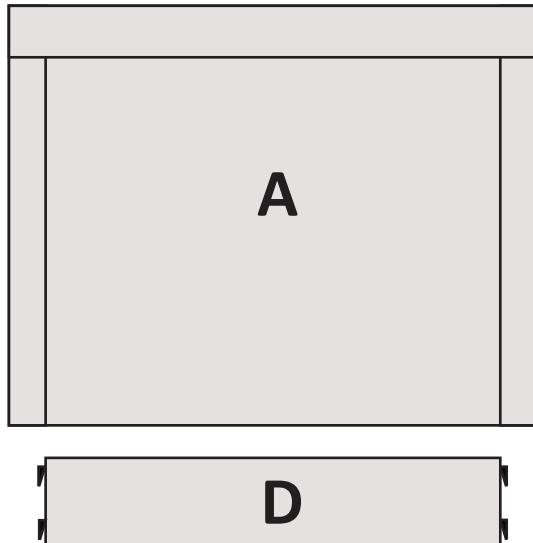


Slide the front cross panel into the slots present on the side panels.

4.

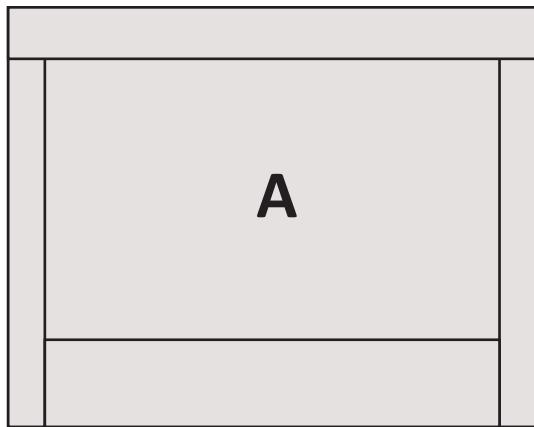


Assemble the lock configuration
on the front panel.

5.

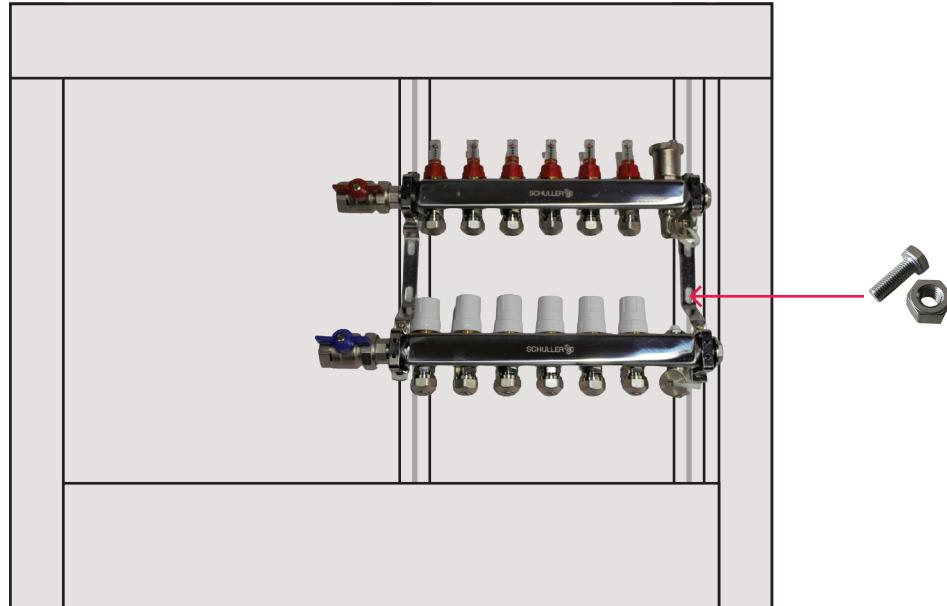

Slide two bolts into each manifold support bracket, and position the brackets inside the cabinet. Once they are secure, overlay the manifold bracket holes onto the bolts, and thread the nuts onto the bolts. With the manifold mounted, it is recommended to install the loops at this point.

6.

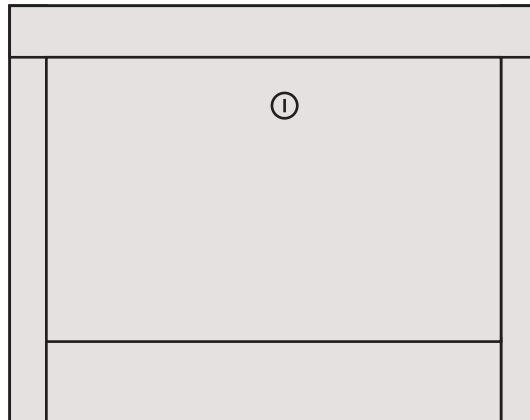

Mount the front door panel and engage the lock.