

RETURN VALVES

SSE-VWD-75/100/125/150 Isolating valves




- 1/2" FNPT Port
- Brass Solder Connection
- Ball Valve Design
- Rated For Hydronics, Non Potable
- Port Cap W/ Washer Included
- Bleed Port Adapter Sold Separately

ALL ON ONE VALVE

Isolates sections of piping where required.



Facilitates draining or filling of system.

Interchangeable cap or bleed port adaptor.

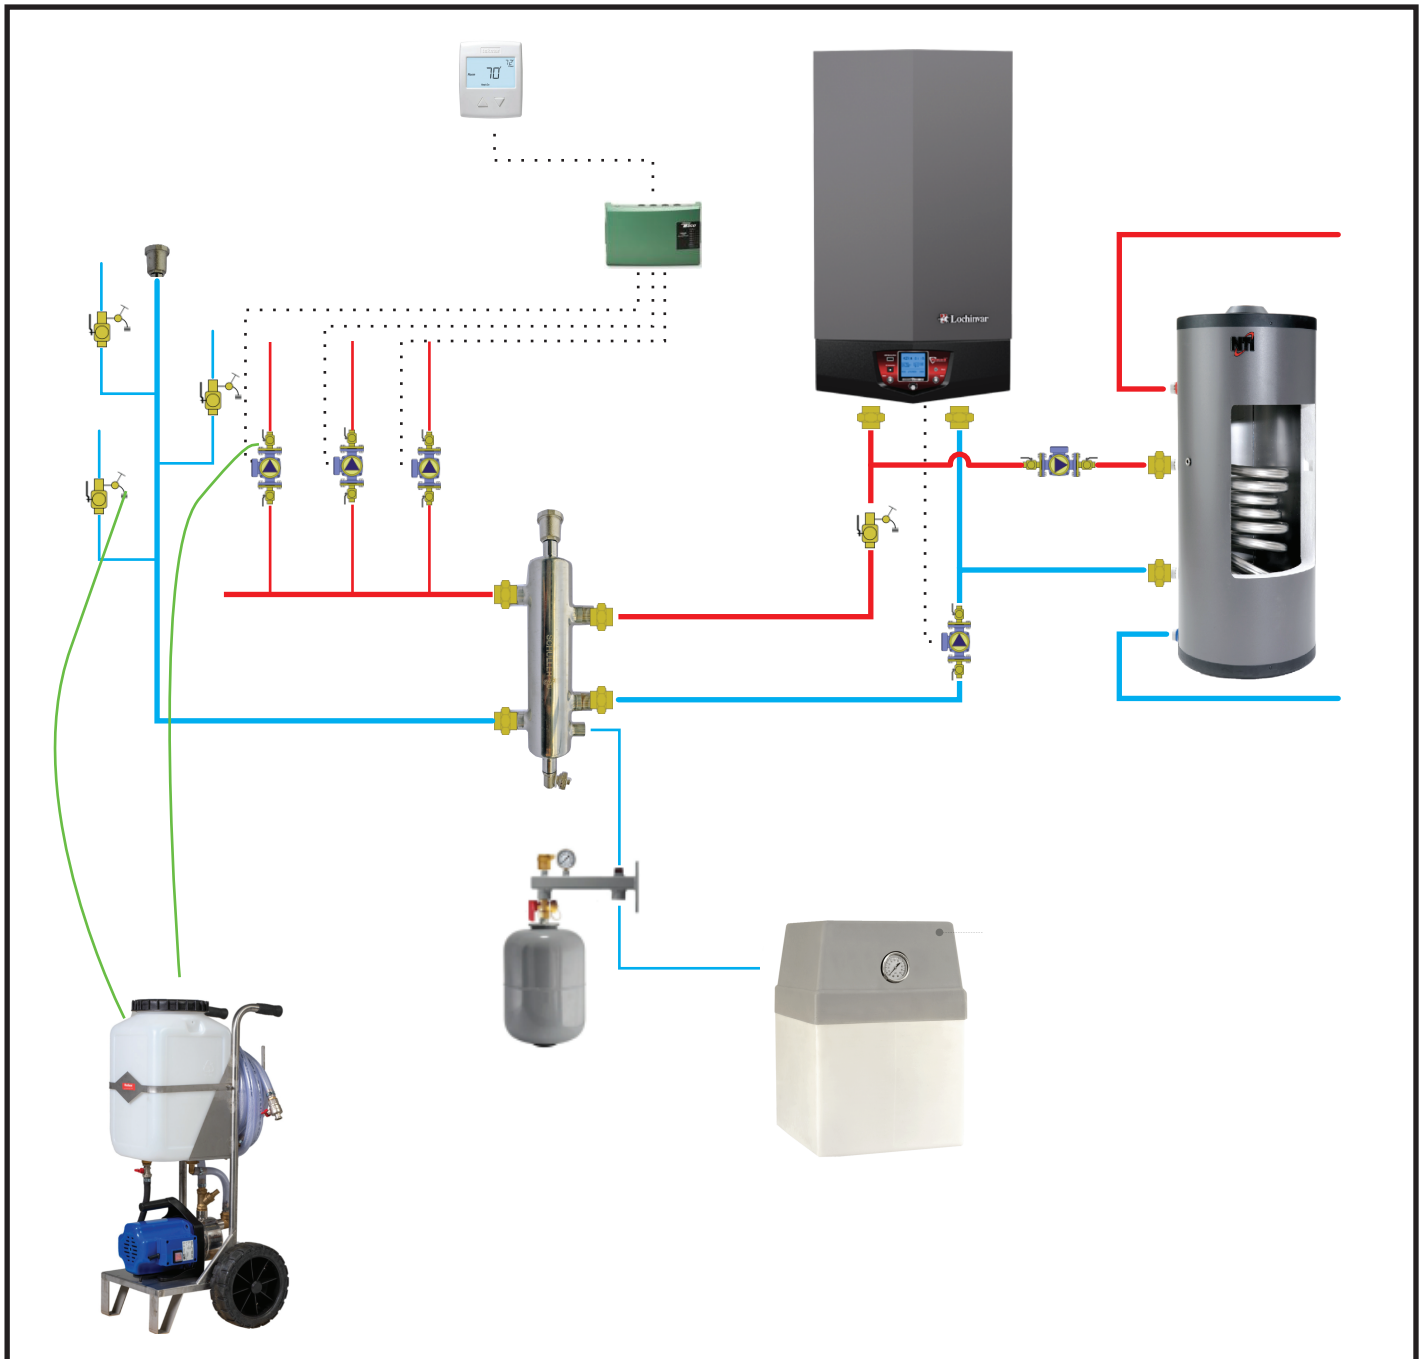



The Schuller valve provides an excellent method for installers to fill and circulate glycol throughout the system. Using the 1/2" FNPT x garden hose port, a glycol feeder pump can be connected to an isolation flange end with a bleed port. Once the loop is isolated, injection and circulation can begin until the loops are pressurized and ready to be turned on.

3/4" Valve

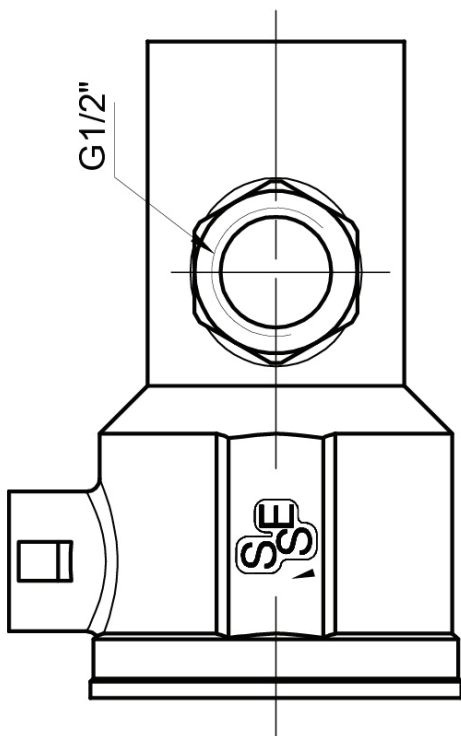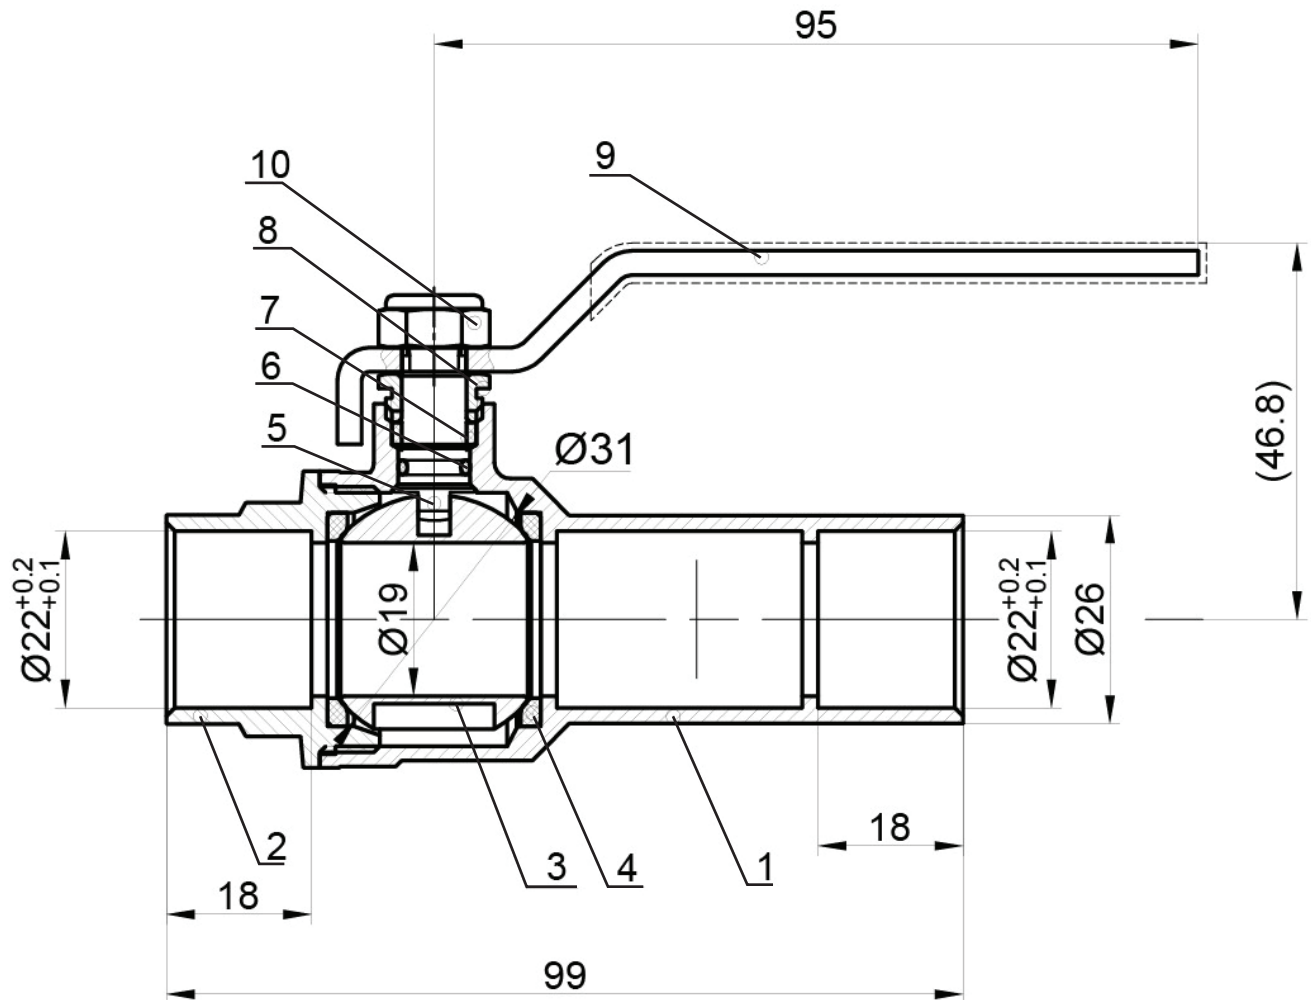



Number	Name	Qty.	Material
1	Valve Body	1	HPb59-2RA
2	Valve Cover	1	HPb59-2RA
3	Ball	1	HPb57-3
4	Poppet	2	PTFE
5	Stem Valve	1	CW617N
6	O-Ring	1	NBR
7	Filling	1	PTFE
8	Pressure Cover	1	HPb57-3
9	Handle	1	Q235A
10	Nut	1	S/S304

1" Valve

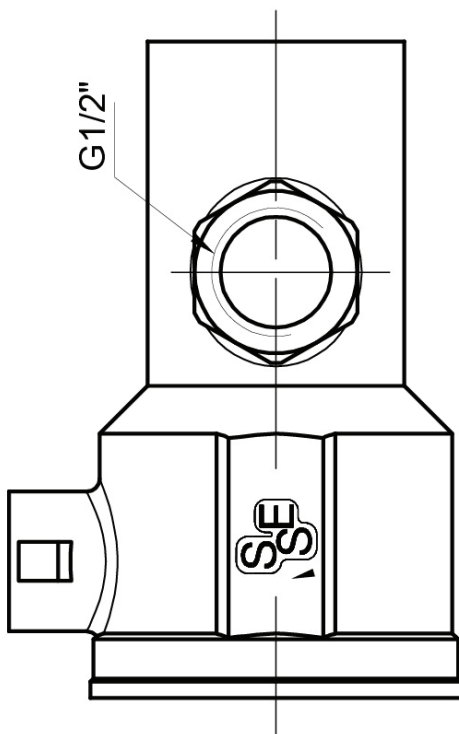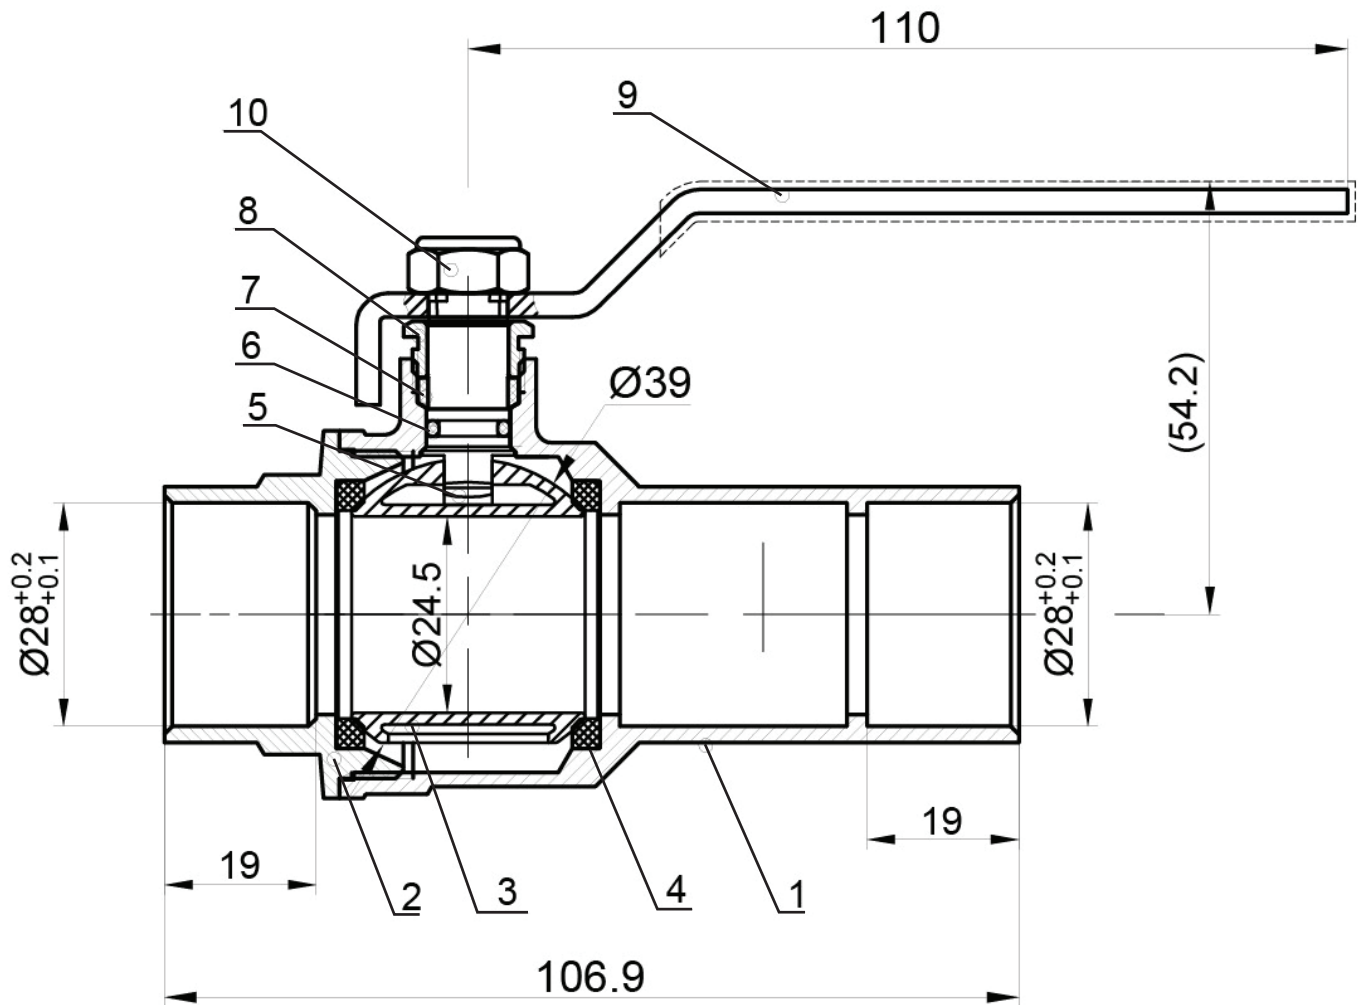



Number	Name	Qty.	Material
1	Valve Body	1	HPb59-2RA
2	Valve Cover	1	HPb59-2RA
3	Ball	1	HPb57-3
4	Poppet	2	PTFE
5	Stem Valve	1	CW617N
6	O-Ring	1	NBR
7	Filling	1	PTFE
8	Pressure Cover	1	HPb57-3
9	Handle	1	Q235A
10	Nut	1	S/S304

1-1/4" Valve

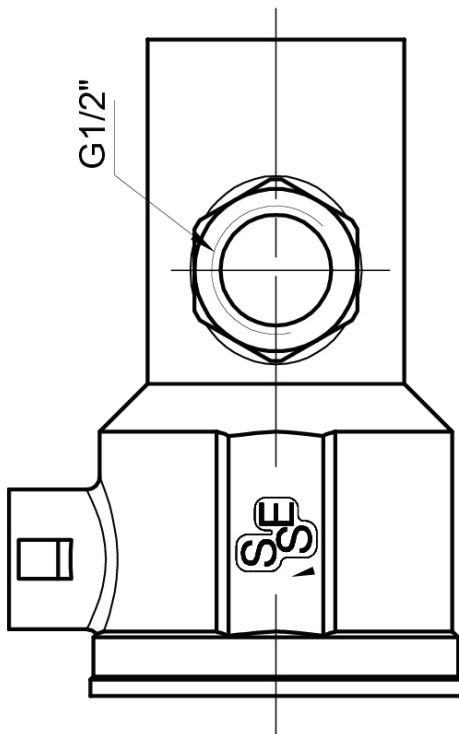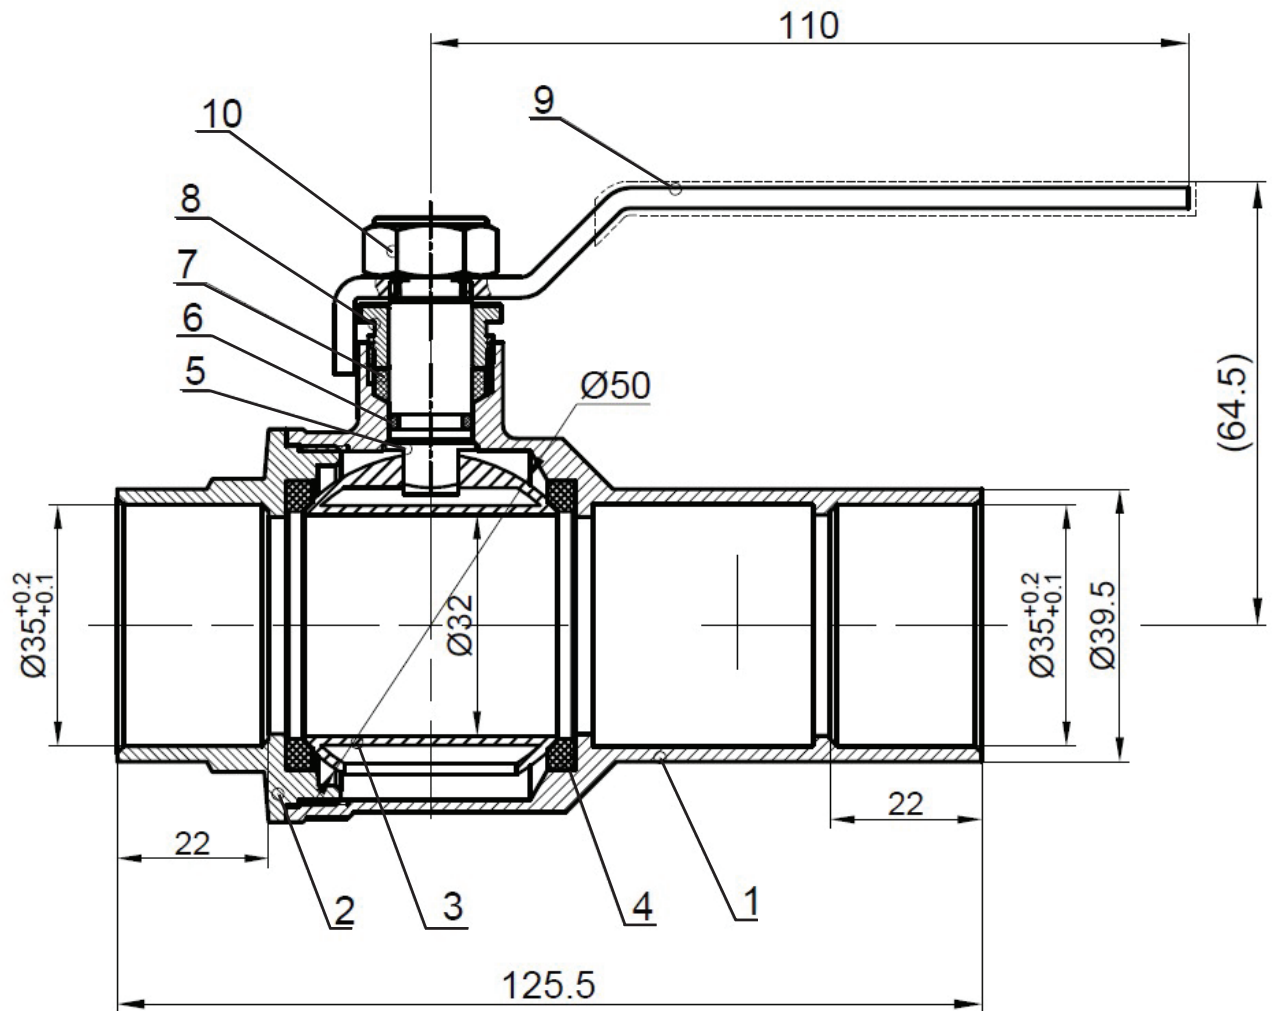

Number	Name	Qty.	Material
1	Valve Body	1	HPb59-2RA
2	Valve Cover	1	HPb59-2RA
3	Ball	1	HPb57-3
4	Poppet	2	PTFE
5	Stem Valve	1	CW617N
6	O-Ring	1	NBR
7	Filling	1	PTFE
8	Pressure Cover	1	HPb57-3
9	Handle	1	Q235A
10	Nut	1	S/S304

1-1/2" Valve

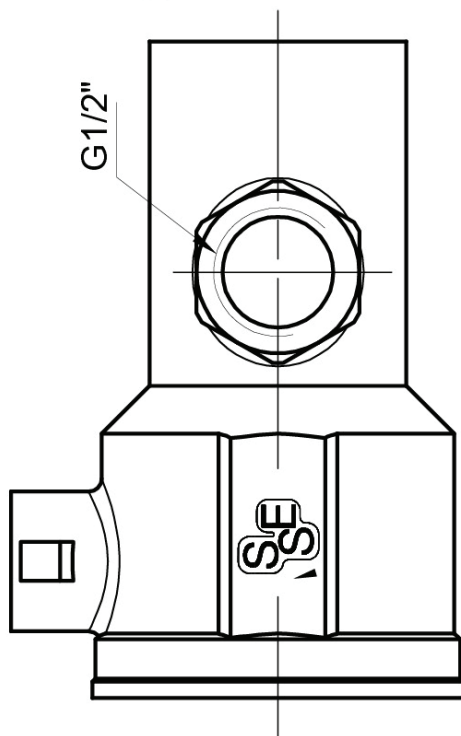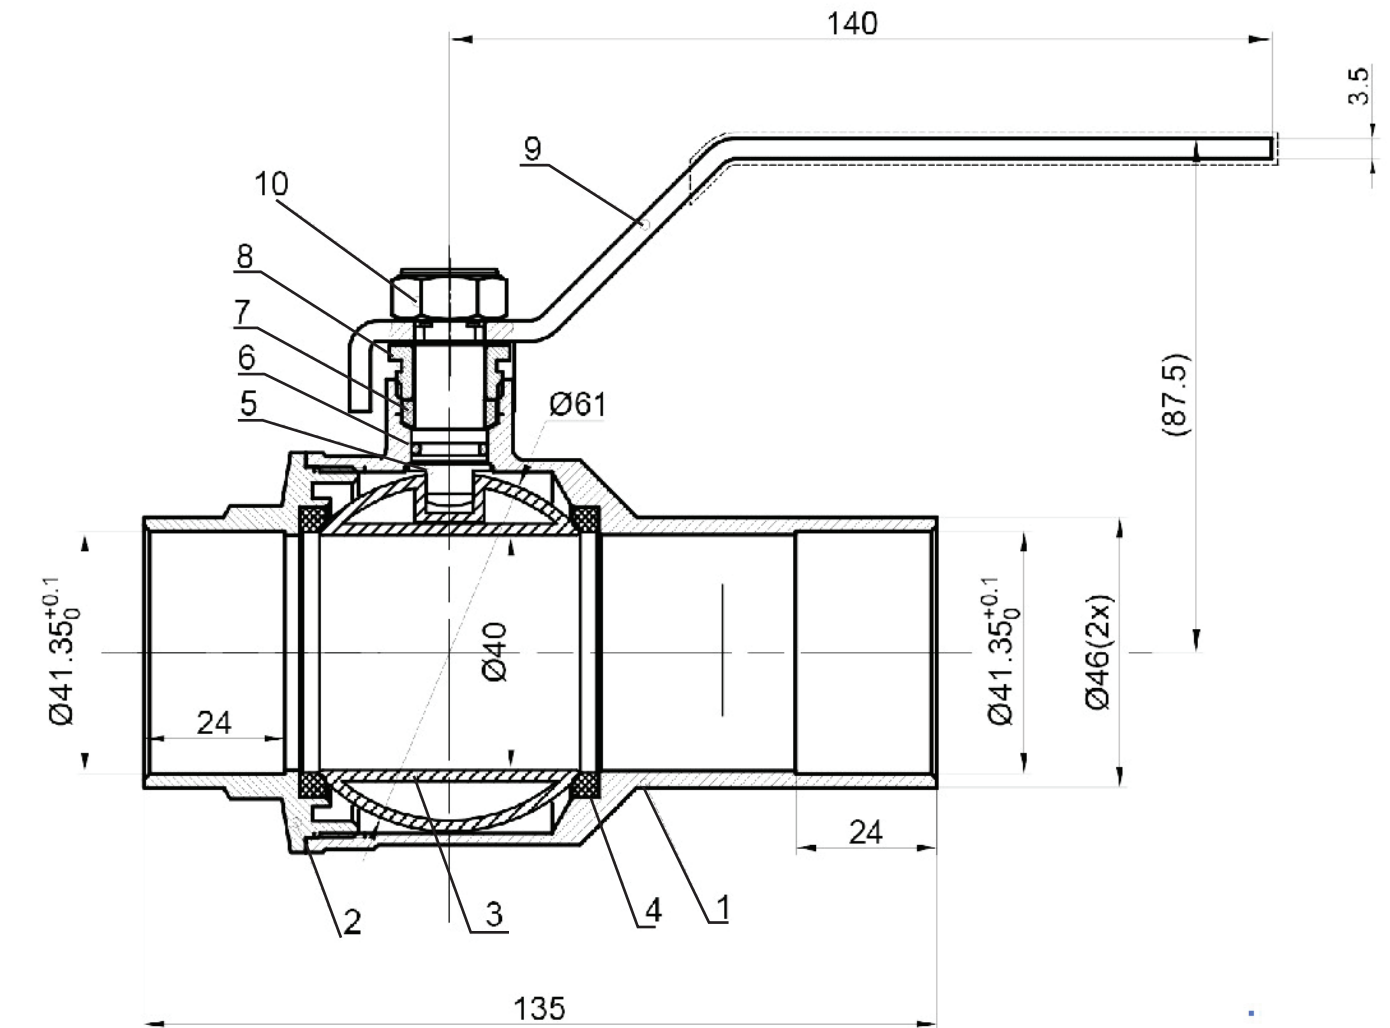

Number	Name	Qty.	Material
1	Valve Body	1	HPb59-2RA
2	Valve Cover	1	HPb59-2RA
3	Ball	1	HPb57-3
4	Poppet	2	PTFE
5	Stem Valve	1	CW617N
6	O-Ring	1	NBR
7	Filling	1	PTFE
8	Pressure Cover	1	HPb57-3
9	Handle	1	Q235A
10	Nut	1	S/S304

